

Guide to operate Admin FR 6.1 AV system

STEP 1

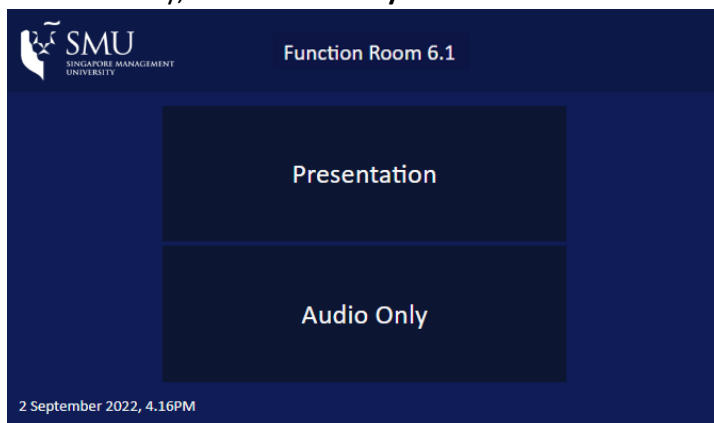
Press and hold on the logo to start.



STEP 2

For audio and video projection from laptop, select **Presentation**.

For audio only, select **Audio only**.



STEP 3

Select input

STEP 4

Adjust volume

For mic volume, adjust **Mic** level.

For HDMI volume, adjust **Media** level.



STEP 5

Shutdown system after use

Refer to next page for image illustration.

3
Located on the Rostrum

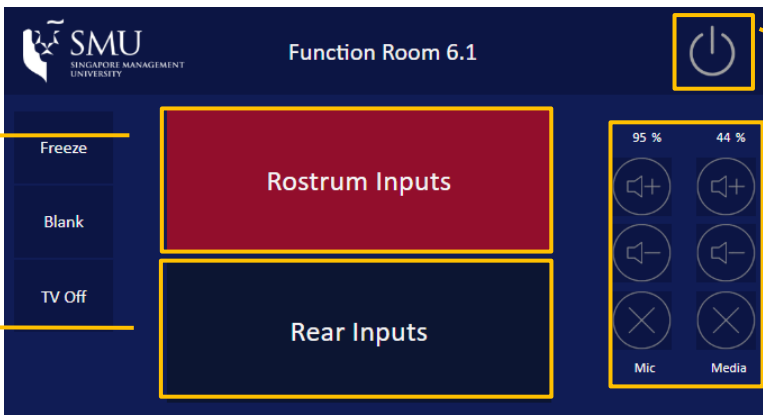Located in the side wall near the door



5
Shutdown

4
For mic volume, adjust **Mic** level.
For HDMI volume, adjust **Media** level.



ON/OFF switch